

# Br802 *User Manual*






<b>Contents</b>		
<b>Introduction</b>		
Pager Features		
<b>Getting Started</b>		
Battery Information	1	16
Battery Installation and Removal	2	17
Button Definition	2	18
Pager On	2	18
Pager Off	2	18
Backlight	2	18
Main Menu Screen	2	18
<b>Function Menus</b>		
Alert Mode	3	19
Quick Access to Vibrate Mode	3	19
Time and Date	3	19
Private Time	3	19
Alarm	3	19
Pager Control	3	19
Set Contrast	3	19
1 Auto Scroll		16
2 Reminder Alert		17
2 Set Zoom		18
<b>3 Messages</b>		<b>19</b>
3 Button Definition for Inbox and		
4 Saved Folders		19
5 Button Definition for Info Folder		20
6 Inbox Folder		21
6 Inbox Folder Function Menu		22
6 Receiving Messages		24
7 Error & Priority Messages		25
8 Message Full Indication &		
9 Duplicate Messages		26
10 Info Folder (Information Service)		27
11 Info Folder Function Menu		28
12 Saved Folder		30
13 Saved Folder Function Menu		31
14 <b>Maintenance</b>		<b>32</b>
15 Care of your Pager		32

## Pager Features

 
The BR802 offers a wide range of useful features.

- 4-Line, 20 English character screen
- Up to 30 Inbox messages
- Up to 15 Info folder addresses. Memory= 5 Messages per address
- 16 Saved folder slots for messages transferred from the Inbox or Info folders
- 8 user selectable alert melodies
- Vibrate alert and Vibra-call
- Quick access to Vibrate mode
- 3 speed auto scrolling option
- Priority alert
- Private Time
- Backlit display for ease of reading in dark
- Message zoom in/out mode
- Unread message indication
- Alarm

### **Battery Information**

This pager is designed to operate on one 'AA' size alkaline battery (Do not use any other battery type other than AA alkaline). If the display shows  the battery level is low. Replace the battery as described on page 4. The correct time and any stored Messages will remain intact for up to one minute after removing the battery.


***WARNING*** - Use of a battery other than an Energizer E91 OR a Duracell MN1500 1.5V AA Alkaline Battery may impair Intrinsic Safety UL rating of this device.

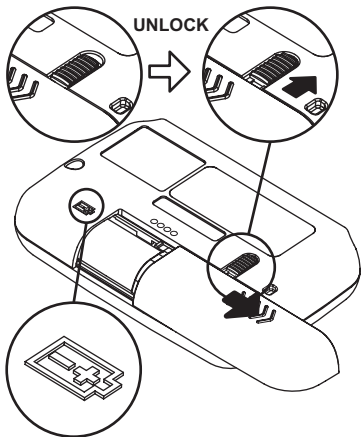

## Battery Installation and Removal

- Place the pager face down in the palm of your hand
- Unlock the battery door lock by sliding it to the unlocked position.
- Push the battery door and slide it out as shown.
- Slide a new battery into the battery compartment.
- Ensure that the battery polarity is correct as indicated on the housing.
- To close the battery cover, slide the battery door back into position and lock it using the battery door lock
 
## Button Definition

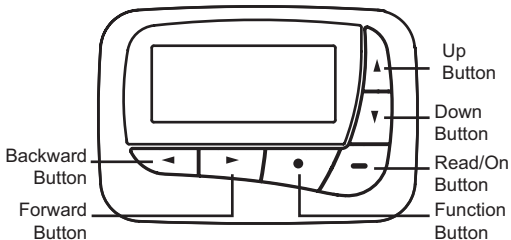






- Backward Button: navigate back
- Forward Button: navigate forwards
- Function Button: access the function menus
- Read/On Button: read messages/ hold to turn pager on
- Down Button: navigate down/ hold to quick access vibrate mode
- Up Button: navigate up


### Pager ON


Press and hold  for 2 seconds to turn on the pager.

### Pager OFF

Press the  button once from Main Menu screen to go to Function Menu screen, then press the  button five times to select TURN OFF function. Then press the  button, "TURN OFF?" is displayed. Press the  button again to confirm turning your pager off, or the  button to cancel.

 
### Backlight

Press and hold  for 2 seconds to turn ON the backlight manually.

Press and hold  for 2 seconds to turn OFF the backlight manually.




## Main Menu Screen

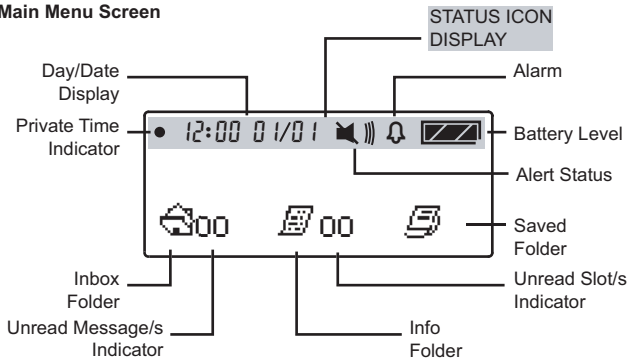

The pager returns to the Standby screen after the time out period. Time, date, battery level and Private Time are displayed in the Standby screen. Press any button to return to the Main Menu Screen.

## Function Menu

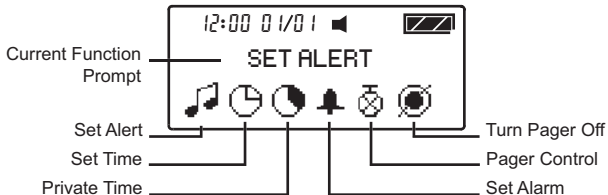 

- Press ● to enter the Function Menu screen from the Main Menu screen.
- Press ◀ / ▶ to move to the previous/next Function Menu icon.
- Press ● to enter the current selected function sub-menu.
- Press ■ to cancel and return to the Main Menu.

### **Pager Tips**

*After 16 seconds of inactivity on any screen, the pager returns to the Standby screen without saving changes.*

## Alert mode



### Melody Mode Icons

- Press ● to enter the Function Menu screen from the Main Menu screen.
- Press ● to enter alert mode sub function. The current active alert will blink without alerting.
- Press ◀ / ▶ to move to different alert modes and hear a sample; from vibrate to sleep, vibra-call, chirp, continuous alert and alert melodies 1 to 8.
- Press ● to confirm your selection, or ○ to cancel.

The alert status is updated in the Status icon display, as described below:

🔊 Audio:  
Alert melody, chirp,  
continuous alert.

 
🔊 Vibrate:  
Vibration

🔊 Sleep:  
Receives message but no  
alert.

🔊 Vibra-call:  
Vibration followed by  
audio alert.

### Quick Access to Vibrate mode


You can use ▼ to quickly access Vibrate mode if your pager is currently in Audio Alert mode. (Your pager must be on the Main Menu page in order to use this function).

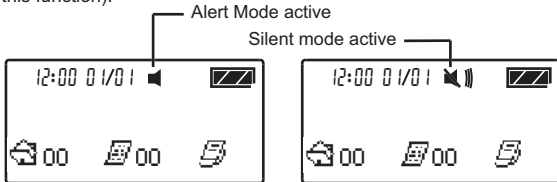

- Press and hold ▼ for 2 seconds to access Vibrate mode.
- Repeat the process to return to previously active Alert mode.
- When the pager is in Private Time, quick access to Vibrate mode is not available.

## Time and Date

 To access and set the time and date of your pager;

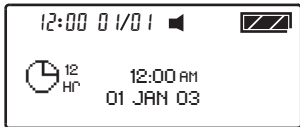

- Press ● once from the Main Menu screen to enter the Function Menu screen and SET ALERT will appear.
- Press ► button once to select "SET TIME", then press the ● button and a 12 hour clock appears.
- To select the 12hr or 24hr clock press ▲ / ▼ then press ► to advance and set the hour of your pager.
- After pressing ► to highlight the hour field, use the ▲ / ▼ button to choose the value.
- Repeat the above steps for setting minutes, AM/PM, day, month and year.
- Press ● to confirm your settings, or ○ to cancel.

### Private Time

 
Activating Private Time sets a daily period of time in which your pager will not alert. Private Time overrides any current ALERT MODE status. However, the pager will still receive messages, the ALARM will still sound and Priority Alerts will still alert when the pager is in Private Time.



- Press the ● button once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press ► twice to select "PRIVATE TIME", then press ● to enter. A flashing clock appears.
  - Press ▲ / ▼ to activate or deactivate the Private Time function.\*
  - Press ► to go to the "START" field, press ▲ / ▼ to set the starting time. Then Press ► to go to the "END" field, press ▲ / ▼ to set the ending time.
  - Press ● to confirm your settings, or ⏻ to cancel.
- \* A dot at the left of the Status Icon Display indicates that the function is active.

## Alarm

To use your pager as an Alarm;

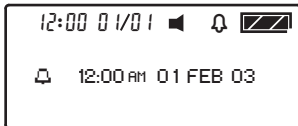


- Press **●** once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press **▶** three times to select "SET ALARM", then press **●** to enter and a flashing **🔔** appears.
- Press **▲ / ▼** to turn the alarm ON **🔔** or OFF **🔕**. Press **▶** to move to the time field.
- Press **▲ / ▼** to change the hour then press **▶** to move to the next field. Repeat this step for setting minutes, AM/PM, day, month and year.
- Press **●** to confirm your settings, or **⏪** to cancel.
- When the Alarm is active an Alarm icon is displayed in the Status Bar.

### **Pager Tips**

 *By setting no date for your alarm the alarm will sound every day at the specified time; - example: "9:00 AM - - - - -"*

### Pager Control

The Pager Control Menu allows you to control the default settings of your pager.

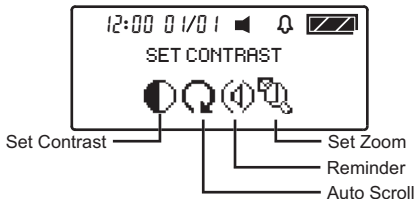

- Press ● once from the Main Menu screen to go to the Function Menu screen
- SET ALERT will appear. Press ► four times to navigate to PAGER CONTROL
- Press ● to enter subfunction screen.
- Press ◀ / ▶ move to the next control icon.
- Press ● to enter the selected control setting screen.



## Set Contrast

 
To change the display contrast of your pager's screen;






- Press ● once from the Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press ► four times to select "PAGER CONTROL", then press ● and "SET CONTRAST" appears. Press ● to select Set Contrast.
- Press ◀ / ▶ to select and change the display contrast of your pagers screen.
- Press ● to confirm your settings, or ◻ to cancel.

### **Auto Scroll**

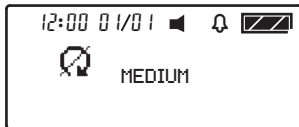Activating Auto Scroll will cause the display to scroll through a message automatically. The display will scroll faster or slower depending on the set speed.



- Press ● from the Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press the ► button four times to select "PAGER CONTROL", then press ● . Press ► once and "AUTO SCROLL " appears. Press ● to select Auto Scroll.
- Press ▲ / ▼ to make auto scroll active  or inactive  .
- Press ► to highlight auto scroll level and use ▲ / ▼ to select "SLOW", "MEDIUM" or "FAST" as the scroll speed.
- Press ● to confirm your settings, or  to cancel.

### **Reminder Alert**

By turning Reminder on, the pager will alert at 2 minute intervals when there are unread messages.



- Press ● once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press ► four times to select "PAGER CONTROL", then press the ● button once and press the ► button twice and "REMINDER" appears. Press ● to enter the Reminder menu.
- Press ▲ / ▼ Button to switch ON or OFF.
- Press ● to confirm your settings, or ⏪ to cancel.

### Set Zoom

You can double the font size of your message display for easy reading.



- Press **●** once from Main Menu screen to enter the Function Menu screen and "SET ALERT" will appear. Press the **▶** button four times to select "PAGER CONTROL", then press the **●** button and scroll the **▶** button three times and "ZOOM " appears. Press **●** to enter the Set Zoom menu.
- Press **▲** / **▼** to switch ZOOM ON or OFF.
- Press **●** to confirm your settings, or **■** to cancel.

### ***Button Definition for Inbox and Saved Folders***

In the Inbox or Saved Folder Screen;







- : displays content of current message
- ▶ : move to the next message
- ◀ : move to the previous message
- ▲ : move to the previous line of message icons
- ▼ : move to the next line of message icons
- : enter Inbox/Saved Folder Function screen

When reading a Inbox or Saved message;







- : scrolls down through the message. When it reaches the bottom it returns to the Inbox/Saved Folder Screen
- ▶ : move to the next message
- ◀ : move to the previous message
- ▲ : jumps to the top of the message. When at the top of the message it returns to the Inbox/Saved Folder Screen
- ▼ : scrolls down through the message. When it reaches the bottom it returns to the Inbox/Saved Folder Screen
- : enter Inbox/Saved Message Function screen

**Button Definition for Info Folder**

In the Info Folder Screen;

 
-  : displays the content of current message in the slot
-  : move to the next slot
-  : move to the previous slot
-  : preview the previous message in the current slot
-  : preview the next message in the current slot
-  : enter Info Folder Function screen

When reading an Info Folder Message;


-  : scrolls down through the message. When it reaches the bottom it jumps to the next message. When it reaches the last message in the slot the pager returns to the first message of the slot
-  : move to the next message
-  : move to the previous message
-  : jumps to the top of the message. When at the top it returns to the Info Folder Screen
-  : scrolls down through the message. When it reaches the bottom it jumps to the next message. When it reaches the last message in the slot the pager returns to the first message of the slot
-  : enter Info Message Function screen

## Inbox Folder

- Press  to enter Inbox Folder Screen from the Main Menu screen when the cursor is on the Inbox Folder icon.

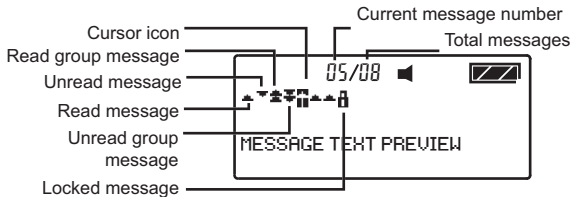

### Inbox Folder Function Menu

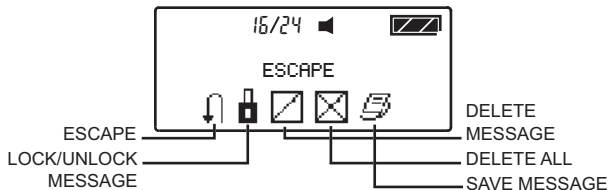 


- Press ● to open the Inbox Folder Function Menu screen.
- Press ► to move to the next Inbox Folder Function prompt.
- Press ● to activate the selected function.
- A confirmation prompt "?" comes with "DELETE ALL" and "DELETE MESSAGE".
- Press ● again to confirm, or ○ to cancel.



- A message is defined as read once the first page of the message has been read. Previewing a message is not considered as reading a message.
- Locking a message prevents it from being accidentally deleted or overwritten by new messages. You can lock up to 15 messages.
- You can enter Inbox Message Function menu by pressing ● when you are reading the message. The operation is the same as the Inbox Folder Function Menu except there is no "DELETE ALL".
- Please note. Locked messages cannot be deleted. Additionally, unread messages cannot be deleted by using "DELETE ALL".

### Receiving Messages

 
When a message is received, your pager alerts you according to your set alert mode. The time and date stamp at the end of each message indicates when the message was received.

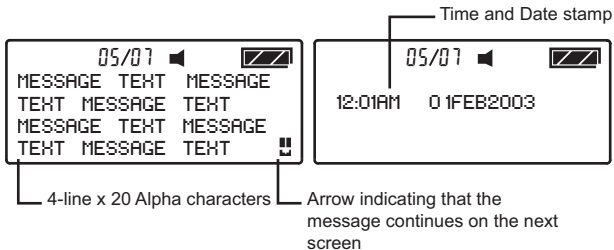

- Press  to read the message.

### Error and Priority Messages

 - When an error message is received and read, the incorrect characters blink. Error messages are a result of poor reception from the paging station.

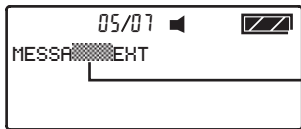

Blinking incorrect characters icon

- When a Priority message is received, your pager will alert you with a unique alert no matter what mode the pager is currently in (eg; sleep, vibrate, private time etc.). The sender determines priority messages.


### Message Full Indication and Duplicate Messages

 -If the Message Full Indicator appears and you have not deleted the old messages, the new received messages will overwrite the oldest read messages first.



Message Full Indicator


- When your pager receives a duplicate of a message it will not show multiples of the same message but will show only one message and display the Duplicate Message icon in the message preview screen.

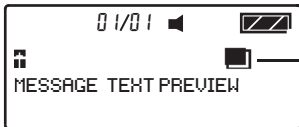


Duplicate Message icon

### Info Folder (Information Service)

 Your pager can receive information such as world news or financial report (the extent of the information received depends on your carrier)

- Press any button to enter the Main Menu Screen from the Standby screen
- Press  to enter the Info Folder Screen from the Main Menu screen when the cursor is on the Info Folder icon.

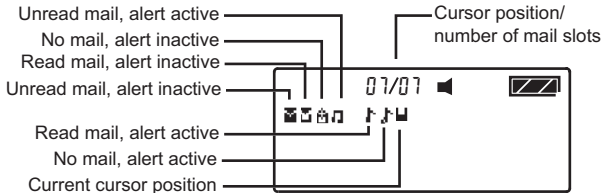


\*You can store a maximum of 5 Info messages from the same source in one slot.

\*After a slot is full(5 messages) the next incoming message will delete the oldest message.

### Info Folder Function Menu

 Press ● to enter the Info Folder Function Screen from the Info Folder Screen

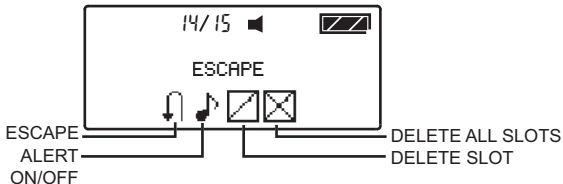


- Press ◀ / ▶ to move to the previous/next Info Folder Function prompt.
  - Press ● to activate the selected function.
- A confirmation message "?" comes with "DELETE SLOT" and "DELETE ALL SLOTS".
- Press ● again to confirm your settings, or ○ to cancel.

- You can enter Info Message Function menu by pressing ● when you are reading mail. The operation is the same as the Info Folder Function menu except there is no "DELETE ALL SLOTS" and there is an additional function of "SAVE MESSAGE", which allows you to move individual Info messages to the Saved Folder.

### Saved Folder

 You can store up to 16 important Inbox or Info messages in your Saved Folder. When the Saved Folder is full, "MEMORY FULL" appears if you attempt to store Inbox or Info messages to the Folder.

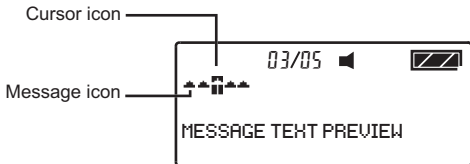


- Press the  Button to enter the Saved Folder screen from the Status screen when the cursor is on the Saved Folder icon.



### Saved Folder Function Menu

 - Press ● to enter the Saved Folder Function Screen from the Saved Folder Screen

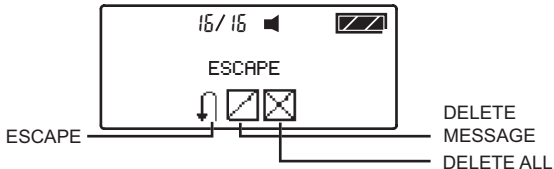

-You can enter Saved Message Function menu by pressing ● when you are reading the message. The operation is the same as the Saved Folder Function menu except there's no "DELETE ALL".

## **Maintenance**

### **Care of your Pager**

To maintain the fine quality of your pager's display screen, please do not subject the pager to extreme temperatures or moisture. Clean the pager housing using a soft non-adhesive cloth. Do not immerse the pager in water. Do not use any other cleaning solutions.

|

—

|

—

|



—

|

—

**DAVISCOMMS**

DAVISCOMMS (S) PTE LTD  
361 Ubi Road 3, #04-06  
Armorcoat International Building  
Singapore 408664

**500050R01**

